


FIELD NOTE

Installation of Cavity Wall Insulation (Seal Seams & Adhere to Substrate)

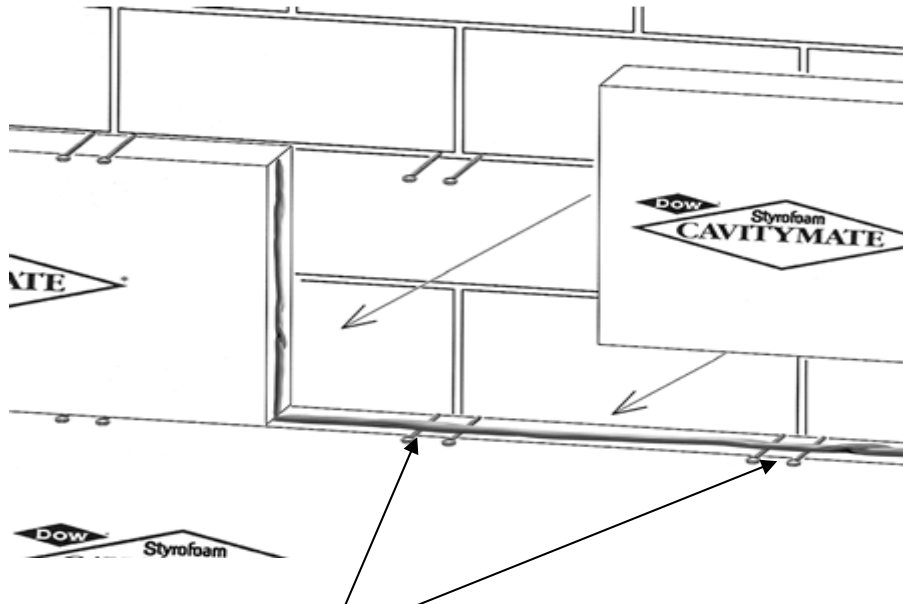

Place ¼" diameter bead of PL300 adhesive/sealant just inside the head and bed joint of the previously installed sheets.



Continue the PL300 over the adjust. ties to adhere the insulation to the substrate.

MASONPRO[®]

43300 Seven Mile Road • Northville, MI 48167

1-800-659-4731