

Tips to improve performance and extend the life of your 1" Bullnoser™ CMU Corner Router

- Always use the highest standard of safety including breathing, eye, and hearing protection
- Use with any 4" hand held grinder
- Step 1: Use a hammer or cup grinder to take the edge off the corner. Try keeping the substrate moist to control dust.
- Step 2: Start grinding from the outside edge of the router bit in to avoid over wear at the center.
- Step 3: Create a bull-nose finish on all types of CMU either in place (jambs and heads), individually, or laid side by side on a table.






Step 1



Step 2



Step 3

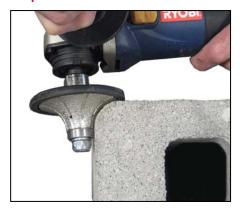



masonpro.com 1-800-659-4731