



FIELD NOTE

Installation of Cavity Wall Insulation (Adhere to Substrate)

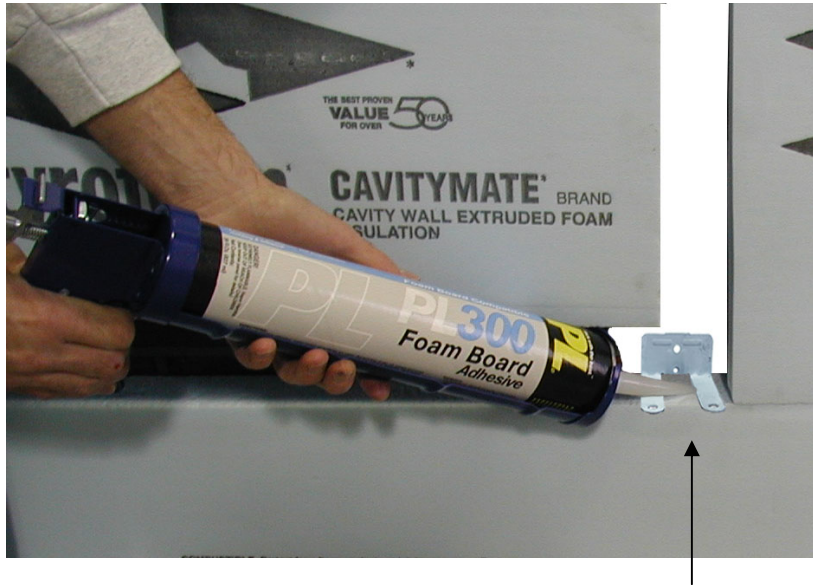

Apply ¼" diameter bead of PL300 adhesive over the adjust. brick ties or wire ties to adhere the insulation to the ties which in turn are mechanically attached to the substrate.

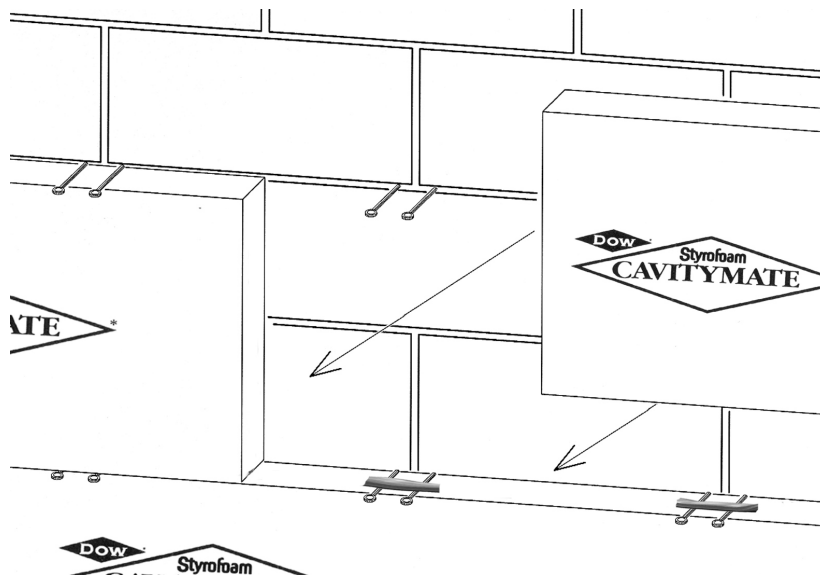

MASONPRO®

1-800-659-4731

www.masonpro.com