




**Installation of
Cavity Wall Insulation
(Seal Seams & Adhere to Substrate)**

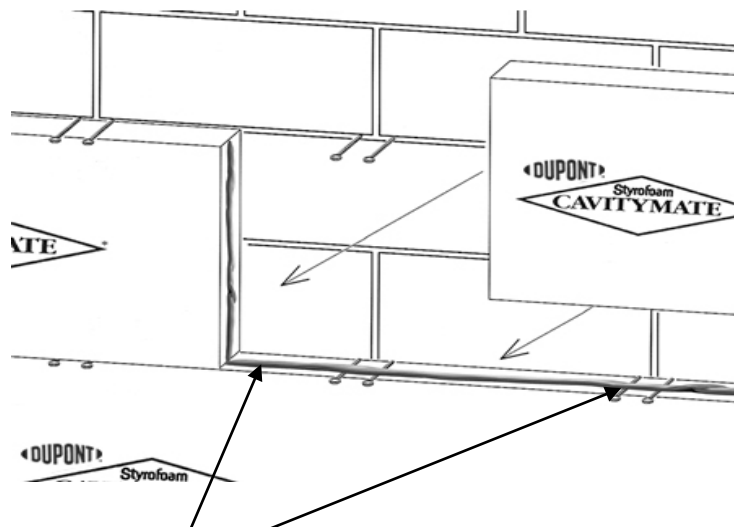

Place 1" diameter bead of Great Stuff Pro **adhesive/sealant** just inside the head and bed joint of the previously installed sheets.



Continue the Great Stuff Pro over the adjustment ties to adhere the insulation to the substrate.