


# POST SPEED LEAD

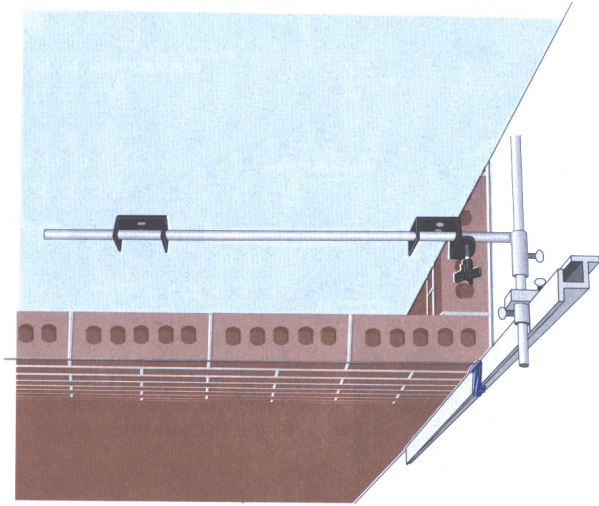

The **Post Speed Lead** needs only one bracket after the first brick is laid. The bottom of the vertical pole is held against the brick by the tension of the line.

The **Post Speed Lead** brackets are easily installed and removed and include a swivel allowing Speed Lead to swing away from brick work for easy striking and clean up. No adjustments or reattachments are necessary. Bricklaying can resume in seconds by reconnecting the line clips.

## Applications

